

INSTALLATION INSTRUCTIONS for Replacement Range Block WB17T10006CM

This Kit Contains:

- Range Block
- 2x 60" Wire Leads
- 2x Mounting Clips
- Instruction Sheet



Disconnect power before servicing.
Failure to do so can result in death or
electrical shock.

Instructions

1. Remove parts necessary to expose wire connections to the cooktop controls. Remove top burner, drip pan, and receptacle block mounting screw.

NOTE: If replacing more than one terminal block, do only one at a time so you will be sure you are connecting the wires to the proper wire terminals.

2. Select the mounting clip that matches the grounding terminal on the part you are replacing.

NOTE: You must use the entire length of both wire leads included in this kit to connect the terminal black to the control that operates it. So not cut the wires and try to splice them to the new leads under the cooktop. Bundle and tape excess wire in control panel. See Figure 1 on reverse side

3. Disconnect and remove the defective terminal block including the wire leads that connect it to the control.
4. Install the new terminal block and new wire leads in the same manner as the part being replaced.



- When connections are complete, check the cooktop element(s). If the plug prongs are arced (burned, corroded, or eaten away), replace the element as well.

NOTE: If damaged elements are not replaced at the same time as the terminal blocks, repeated failures may occur.

- Check elements for levelness and rocking, adjust as needed.
- Reassemble all parts previously removed and reconnect the electricity.

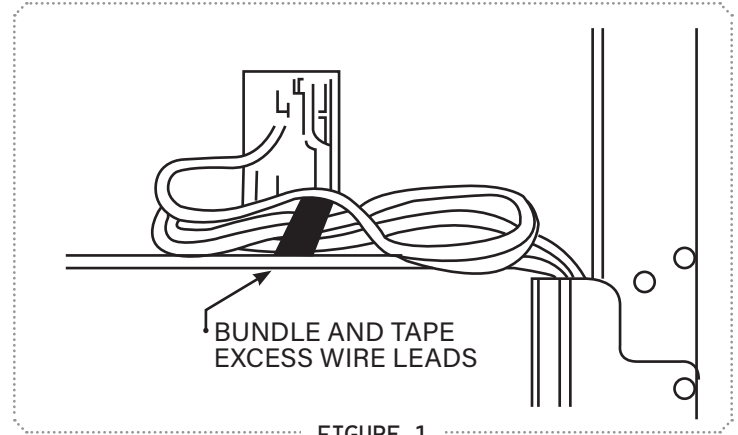


FIGURE 1