

CHOICE

MANUFACTURED PARTS

Installation Instructions for Shock absorber

Replacement for 5304485917

Warning - Disconnect power before repair.


Kit includes the following parts –

2 - Shock absorbers

1- Shock mounting pin (spare)

4 – Nuts

1. To remove the old shock, use a small screwdriver to depress the pin lock tab. Use a plier to pull the pin from the mounting hole.
2. Remove and discard the old shock absorbers, keep the pins.
3. Install the new shock absorber with the plunger shaft toward the cabinet base and the plastic housing towards the tub.
4. Fully insert the mounting pins. An extra pin is supplied in case a mounting pin breaks.
5. Reconnect the washing machine and run through spin cycle to test.

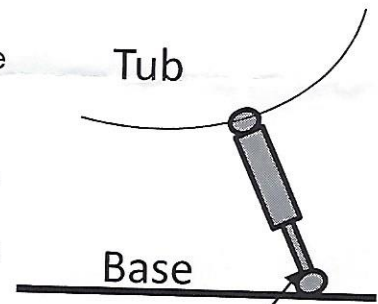

Keep plunger shaft
towards base

Choice Manufactured Parts, Inc.
Naperville, IL

10/19
Made in China